



# **GETTING STARTED GUIDE**

www.beam-mobile.com | info@beam-mobile.com

# The Beam Platform



#### **Beam Sled**

- 6' drop-rated, splash resistant battery case with screen protector for the iPhone.
- Sealable microUSB port for charge & sync.
- · Cleanable with standard germicides, cleaning solutions and cavicides
- Externally replaceable 2100mAh battery pack, extends iPhone battery capacity
- MicroUSB port for charge and sync.\*

Beam for iPhone SE: GM-394-SE | SRP: \$149.99 Beam for iPhone 11 & XR: GM-484-XR11 | SRP: \$149.99



### **Battery Pack**

- · Hot-swappable rechargeable battery pack adds extends your battery on those long shifts
- · Capacity & Type: 2100 mAh Lilon
- Charge time from empty: less than 3 hours

Beam Battery Pack: GM-385-WHT | SRP: \$34.99

#### **Beam Workstation**

- · AC Charging dock for Beam and a spare battery
- Charge iPhone and battery in Beam simultaneously.
- 2A per unit rapid charger
- · Cleanable with standard germicides, cleaning solutions, and cavicides
- Power In: 110-240 VAC @ 50-60 Hz.
- Power to Beam and Battery: 12 watts (5 volts @ 2.4 amps) to each charge bay.

Dock for iPhone SE: GM-386-WGY | SRP: \$69.99 Dock for iPhone 11 & XR: GM-486-XR11 | SRP: \$69.99

### **Beam Charge Dock**

- · Store and charge 5 Beam sleds simultaneously.
- · Charge iPhone and battery in Beam simultaneously.
- 2A per unit rapid charger
- · Cleanable with standard germicides, cleaning solutions, and cavicides
- Power In: 110-240 VAC @ 50-60 Hz.
- Power to Beam units: 12 watts (5 volts @ 2.4 amps) to each charge bay.

Dock for iPhone SE | GM-388-WGY | SRP: \$149.99 Dock for iPhone 11 & XR | GM-488-XR11 | SRP: \$149.99

## **Battery Charge Dock**

- Store and charge 10 Beam battery packs simultaneously.
- 2A per battery rapid charger
- · Cleanable with standard germicides, cleaning solutions, and cavicides.
- Power In: 110-240 VAC @ 50-60 Hz
- • Power to Beam units: 12 watts (5 volts @ 2.4 amps) to each charge bay.

Battery Charge Dock: GM-387-WGY | SRP: \$149.99





### **Beam Holsters**

· Convenient washable holster for Beam


Holster: GM-599-HOL | SRP: \$39.99





· Convenient, cleanable hard-shelled holster for Beam for iPhone SE

Holster: GM-590-HOL | SRP: \$39.99

# **Getting Started**

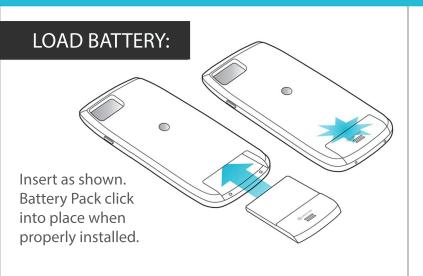

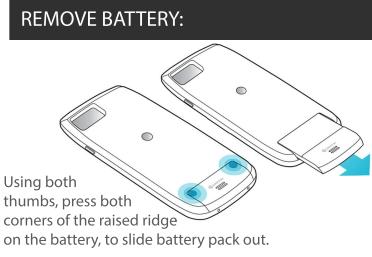


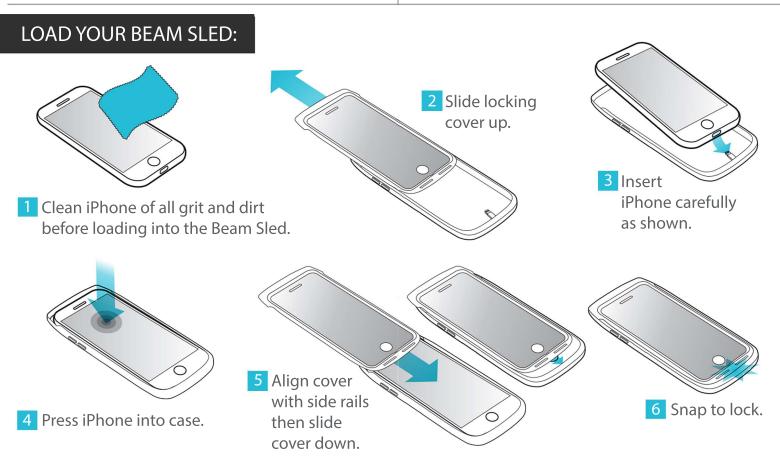

# Using the Charge Docks



1 Place Beam Charging Dock on flat, dry surface away from liquids.

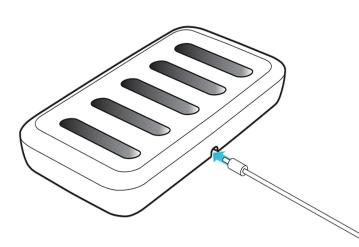


2 Connect main power cable.

## **Battery Charge Indicator**




Press button on the back of Beam to view the charge level:

- Green 66% 100%
- Amber 33% 66%
- Red 0% 33%

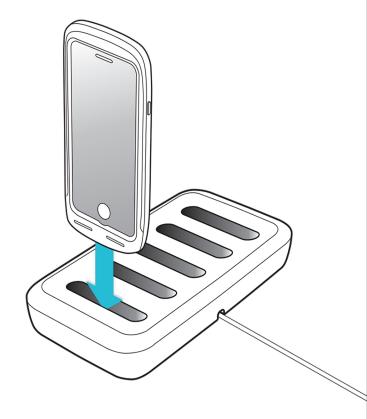

3 Load Battery Pack or Beam as shown.

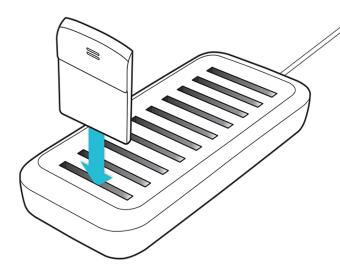

4 Fully charge your Beam's Battery Packs before first use.

# Care & Cleaning


## **BEAM UNITS**




2 Ensure screen shield correctly snapped shut.



3 Use disposable wipe cloth or apply cleaner to paper towel, then wipe.

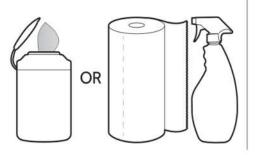

Wipe dry with paper towel.

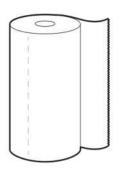


#### DO NOT IMMERSE IN LIQUIDS.



## **CHARGE DOCKS**



2 Use disposable wipe cloth or apply cleaner to paper towel, then wipe.

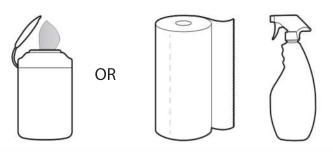


Do not spray cleaner into charge wells.

#### DO NOT IMMERSE IN LIQUIDS.



# **Best Practice & Warranty**

#### TO PREVENT DAMAGE TO YOUR BEAM, DO NOT:



DO NOT immerse Beam, batteries or charge docks in liquids.



DO NOT use abrasive cleaners when cleaning Beam, Charge Docks or batteries.



### DO NOT intentionally throw or drop Beam.



DO NOT charge Beam or batteries in any charger other than authentic, Beam-approved charge docks.



DO NOT apply pressure on the screen protector, without a phone in your Beam sled.

#### **BATTERY TIPS & BEST PRACTICES**



Fully charge Beam and Beam batteries before first use.



Li-lon batteries have a lifespan. After around 500 charge cycles, battery performance will start to decline.



Replace any batteries that have exceeded 500 charge cycles to maintain expected charging performance.

### **Warranty & Support**

Questions? Need support? support@beam-mobile.com



We stand behind every product with the industry's best customer service, backed by a simple, fair warranty. For support please contact us at support@beam-mobile.com





result in exposure to RF energy.







Griffin Medical LLC 3011 Armory Drive, Suite 300, Nashville TN 37204 USA

Beam	组件所含的有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 化合物 (Cr6+)	多溴苯酚 (PBB)	多溴联 苯醚 (PBDE)
塑料组件	0	0	0	0	0	0
印刷电路板组件	Х	0	0	0	0	0
金属部件	Х	0	0	0	0	0

O: 表示该组件所用各类均质材料中所含有毒或有害物质低于 SJ/T11363-2006 的限制要求 X:表示该组件所用各类均质材料中至少有一种材料所含的有毒或有害物质高于 SJ/T11363-2006的限制要求

对销售之日的所售产品,本表显示我公司供应链的电子信息产品可能包含这些物质。 注意:在所售产品中可能会也可能不会含有所有所列的部件。

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received. including interference that may cause undesired operation. The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications to this equipment. Such modifications could void the users authority to operate the equipment.

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications to this equipment. Such modifications could void the users authority to operate the equipment. Improper usage of the device could

It is your responsibility to know and follow hands-free and similar laws for your locale. Please read and understand all instructions and precautions before using this product.

Use of the Made for Apple® badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards

Please note that the use of this accessory with iPhone may affect wireless performance.

©2023 Griffin Medical | http://www.beam-mobile.com | Beam is a trademark of Griffin Medical, LLC. Apple and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. Made in China | Designed in Nashville | Please recycle this package. Thanks!